

Level your load

with Air Lift's new advanced,
no-maintenance load support



AirCELL

Air Lift introduces AirCell — a microcellular urethane spring — as a lower cost, no-maintenance product to reduce sag and improve ride in heavily loaded vehicles!


AirCell is engineered by Air Lift, the air suspension leader, especially for vehicles that maintain constant loads such as work trucks, fleet, and delivery vehicles. They're great for anyone whose truck is always loaded, and wants load support and ride quality at a very affordable price!

Rear kits keep heavily-loaded pickups level and greatly improve ride. Front kits provide support for trucks with snow plows or other heavy front equipment.





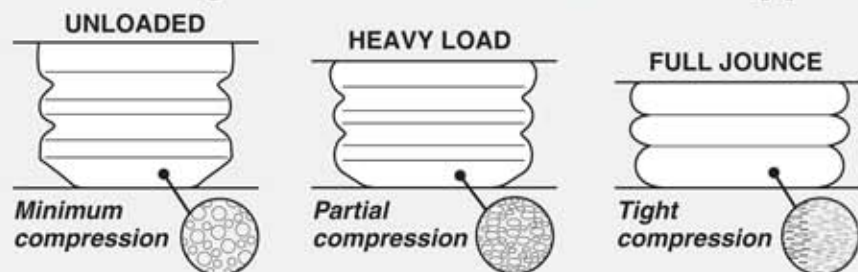

- Easy to install brackets, no air lines or fittings
- Rear kits for popular late-model pickups, front kits for snow plow support
- Made of rugged, long-lasting closed-cell urethane foam, the same material used in OEM suspension parts
- Urethane foam traps air to provide a cushion against sag
- Quick, easy, bolt-on installation
- Lifetime warranty


Three-stage ride comfort and load support




AirCell Applications - For constant load support

Start Year	End Year	Model	Drive	Notes	Front Kit			Rear Kit		
Chevrolet										
2002	2006	Avalanche			52212	x	1			
2007	2009	C-3500	2&4	Commercial chassis				52202	x	1
1996	2000	K-20 — K2500	4WD	With cast lower control arm	52212	x	1			
1996	2000	K-30 — K3500	4WD	With cast lower control arm	52212	x	1			
1999	2009	Silverado 1500	2&4	Non-HD				52203	x	1
1999	2006		4WD	Four door				52202	x	1
1999	2009	Silverado 1500 HD	2&4					52202	x	1
			4WD		52212	x	1			
1999	2009	Silverado 2500, 2500 HD	2&4					52202	x	1
			4WD		52212	x	1			
2001	2009	Silverado 3500	2&4					52202	x	1
			4WD		52212	x	1			
Dodge										
1994	2001	Ram 1500	4WD					52206	x	1
2002	2005		2&4					52204	x	1
2006	2008		2&4	Regular, Quad, and Mega cab				52206	x	1
1994	2002	Ram 2500 HD	4WD		52211	x	1			
2000	2002		4WD					52213	x	1
2002	2009	Ram 2500	4WD		52211	x	1			
2003	2009		2&4					52204	x	1
1994	2009	Ram 3500	4WD		52211	x	1			
2000	2002		4WD					52213	x	1
			2&4	Commercial chassis				52213	x	1
2003	2006		4WD	Commercial chassis OEM box delete				52204	x	1
2003	2009		2&4					52204	x	1
2007	2009		4WD	Commercial chassis				52204	x	1
Ford										
1970	1996	F-150	2&4					52215	x	1
2004	2009		4WD	Excludes heritage, Lincoln Mark LT				52218	x	1
1970	2000	F-250	2&4					52215	x	1
1970	1998		4WD					52215	x	1
2001	2004		4WD	Without snow prep.	52209	x	1			
			4WD					52215	x	1
2005	2009		2&4					52215	x	1
1970	2009	F-350	2&4					52215	x	1
1999	2000		4WD	Without snow prep.	52209	x	1			
1999	2004	F-250, F-350	4WD		52208	x	1			
2005	2009	F-250, F-350	4WD		52207	x	1			
GMC										
2007	2009	C-3500	2&4	Commercial chassis				52202	x	1
1996	2000	K-20 — K2500	4WD	With cast lower control arm	52212	x	1			
1996	2000	K-30 — K3500	4WD	With cast lower control arm	52212	x	1			
1999	2009	Sierra 1500	2&4	Non-HD				52203	x	1
1999	2006		4WD	Four door				52202	x	1
1999	2009	Sierra 1500 HD	2&4					52202	x	1
			4WD		52212	x	1			
1999	2009	Sierra 2500, 2500 HD	2&4					52202	x	1
			4WD		52212	x	1			
2001	2009	Sierra 3500	2&4					52202	x	1
			4WD		52212	x	1			
Toyota										
2000	2009	Tundra	2&4					52210	x	1

Don't see a vehicle listed?
Call (800) 248-0892 to request.

 No frame drilling required.

 Install time (by hour)